

Stress measurement in parts made of Tenite™ cellulosic plastic

In many instances, failures in performance of plastic parts are caused by stresses induced by improper processing conditions rather than by a fault in the plastic material. A high level of stress often causes brittleness, decorating difficulties, and unsatisfactory dimensional stability in extruded, molded, or thermoformed parts. Fortunately, the level and extent of stress can be measured and processing conditions controlled to minimize or eliminate the difficulty.

Stresses and strains

The stresses discussed in this report often are referred to as strains, and this is not entirely incorrect. Stress means a force applied to a body, while strain is the resultant body deformation. Stress and strain are interdependent. A stress can strain an object, but the object can then exert a stress in attempting to return to its unstrained condition. Stress and strain generally exist simultaneously.

The force applied to compress a molten plastic mass and push it through a nozzle or die stretches and bends the polymer molecules. If the plastic cools too rapidly, the molecules are frozen in their deformed (strained) positions when the plastic hardens. Strained polymer molecules may be compared to stretched springs. They have strong tendencies to return to their unstrained positions, and the forces they exert in attempting to do so constitute stresses within the plastic. Since the stresses arise from freezing strained molecules, they are referred to as "frozen-in" stresses.

When a plastic is cold and hard, it is generally able to withstand its frozen-in stresses, but if it is softened by heat or by the action of a solvent, it yields to its internal stresses and shrinks in one or more dimensions. Shrinkage of a large area frequently causes warpage. Sometimes, small sections on the surface may shrink

away from other small sections. This type of shrinkage results in surface roughness and may occur when a coating containing an active solvent is applied to the plastic.

Stresses in a plastic part reduce its toughness and may even cause brittleness. A plastic is tough if its polymer molecules can stretch to an appreciable extent without breaking. This ability allows them to absorb the energy of an impact without damage in the same way a rubber pad cushions the recoil of a shotgun. But if processing conditions cause the molecules to be strained to a degree that approaches their maximum extensibility, they can be damaged by a relatively small amount of additional strain. If they are stretched by an impact, they break and so does the plastic part.

Stresses in plastic parts are divided into two categories: surface and internal. Surface stresses are those within 75 to 100 microns (0.003 to 0.004 in.) from the part's surface; internal stresses may occur throughout the interior.

Surface stress testing

Surface stresses in a plastic part can be measured by the degree of surface wrinkling, frequently called orange peel. This appears when the part is wetted for 5 to 10 seconds with an appropriate solvent by either spraying or dipping. Any solvent remaining on the surface after this period should be removed by shaking the part.

A suitable solvent for testing parts made of Tenite™ cellulose acetate butyrate (CAB) or cellulose acetate propionate (CAP) is composed of 50% acetone and 50% butyl acetate. For parts made of cellulose acetate (CA), a mixture containing 70% ethylene glycol monoethyl ether acetate and 30% acetone is satisfactory. Both solvent mixtures are available commercially in easy-to-use pressurized cans.

Plastics made from wood pulp—
a renewable resource

Internal stress testing

There are two methods commonly used to test for internal stresses. One involves the use of optics; the other involves specimen shrinkage when heated. Parts made of transparent formulations are suitable for either method, but opaque parts may be tested only by a heat-shrinkage procedure, which is sometimes referred to as an unmolding test.

Optical test


Optical testing for stress is based on birefringence, or double refraction, which is a characteristic of aligned (oriented) and strained molecules. Optical testing requires a transparent specimen.

Optical testing is done with a polariscope, which is composed of a light source and two sheets of light-polarizing material with a space between them for insertion of a specimen. The polarizing sheet nearest the light source is called the polarizer; the other sheet is the analyzer. The polarizer and analyzer are crossed, so the field is dark, and the specimen to be examined is placed between them. When the axis of the specimen forms certain angles with the plane of polarization, stressed areas in the specimen appear as rainbow-like bands of color. The color bands repeat in a regular sequence: yellow-red-blue or yellow-red-green.

The relative magnitudes of stresses are indicated by color sequences, called fringes, and by the frequency with which the fringes repeat. The red-green fringes indicate higher stresses than the red-blue fringes, and the higher the stresses, the more rapidly the fringes repeat. In the photographs shown in Figure 1, the highest stresses are evident in (1), which was molded too cold. The lowest stresses are seen in (3), which was molded at 250°C (480°F); the stresses in (2) are intermediate.

More detailed information about the distribution of stress can be obtained by using the polariscope, but the techniques employed are beyond the scope of this technical bulletin. ASTM D4093 covers polariscopic testing; details may be obtained from ASTM Section D-20-10-23 on Residual Strain Measurement.

Figure 1. Stresses in tensile bars molded of Tenite™ cellulose acetate 105-29 (reproduced in actual size)

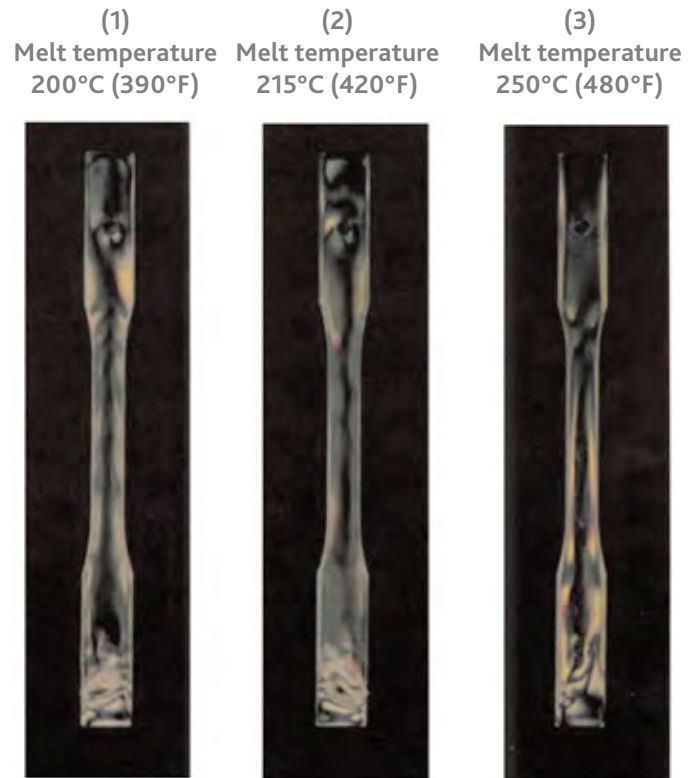

Heat-shrinkage tests

Heat-shrinkage tests, also called unmolding tests, measure the tendency of transparent or opaque specimens to shrink when heated to their softening temperature.

Unmolding tests measure the specimen, subject it to controlled heating, cool it to room temperature, and remeasure it. Excessive shrinkage indicates the presence of potentially troublemaking levels of stress. Large products may be cut into sections to measure internal stresses.

For testing sheet, it is usually necessary to obtain test specimens by cutting the sheet into sections because of size limitations of the test apparatus. Satisfactory test specimens can be obtained by cutting sections 254 mm (10 in.) long by 25.4 mm (1 in.) wide. Testing of specimens taken from different areas and from the machine direction and the transverse direction will indicate whether internal stresses are uniform—or nearly so—throughout the sheet.

Two tests will be described. One involves oven heating the specimen; the other specifies oil-bath heating. The oven test is described by ASTM D1204 (or ECTS-A-PT-G-PTM-6042, a similar method available from Eastman on request).

To test film or sheeting up to 0.64 mm (0.025 in.) thick, place the 25.4-mm by 254-mm (1-in. by 10-in.) specimens in a cardboard (manila) file folder and dust them lightly with talcum powder to prevent sticking. Close the folder and place it in an oven at the appropriate temperature for 20 minutes (see Table 1).

The oil-bath method is described in ASTM D2411 (or ECTS-A-PT-G-PTM-6040, a similar method available from Eastman on request). Either silicone oil or mineral oil can be used for the oil bath, with the specimens supported on a small-mesh wire screen.

In the oven and the oil-bath tests, allow the samples to cool to room temperature and remeasure them.

The proper test temperature varies for different levels of plasticizer, since material with higher plasticizer levels unmold at lower temperatures than ones with less. Table 1 shows desirable test temperatures for various flows of Tenite.

Table 1. Test temperatures for Tenite™ cellulosic plastic

Formula	Plasticizer level, %	Temperature, °C (°F)		Time, minutes	
		Oven	Oil bath	Oven	Oil bath
CA 105, 132	17–29	127 ± 1 (260 ± 2)	141 ± 1 (285 ± 2)	20	8
	33–35	121 ± 1 (250 ± 2)	135 ± 1 (275 ± 2)	20	8
	>35	116 ± 1 (240 ± 2)	130 ± 1 (265 ± 2)	20	8
CAB 264, 285, 485, 530, 550, 575, 576	3–12	127 ± 1 (260 ± 2)	141 ± 1 (285 ± 2)	20	8
	13–16	121 ± 1 (250 ± 2)	135 ± 1 (275 ± 2)	20	8
	>16	116 ± 1 (240 ± 2)	130 ± 1 (265 ± 2)	20	8
CAP 307, 358, 380, 381, 385	8–18	127 ± 1 (260 ± 2)	141 ± 1 (285 ± 2)	20	8
CAP 360, 371, 375, 376, 377, 382, 383, 384	7–16	127 ± 1 (260 ± 2)	141 ± 1 (285 ± 2)	20	8

The differences in dimensions before and after testing usually are reported as percent change from original dimensions. Shrinkage values of 5% or less for molded parts and values of 3% or less for extruded or thermoformed parts are considered normal for most applications. Higher values indicate excessive stresses that may cause part failure. Sheeting for offset printing or a part that is to be subjected to reheating generally must have less than 2% shrinkage in the unmolding tests if they are to have satisfactory dimensional stability.

If test results indicate excessive stresses, processing conditions should be varied until stresses have been reduced to an acceptable level as established by additional testing. This can be accomplished by two methods that may be used singly or together. Either the processing temperature can be raised sufficiently for the molecules to flow past each other freely (rather than stretching or bending) or the formed product can be cooled slowly enough for distorted molecules to have time to return to unstrained positions before the plastic hardens.



Eastman Corporate Headquarters

P.O. Box 431
Kingsport, TN 37662-5280 U.S.A.

U.S.A. and Canada, 800-EASTMAN (800-327-8626)
Other Locations, +(1) 423-229-2000

www.eastman.com/locations

Although the information and recommendations set forth herein are presented in good faith, Eastman Chemical Company ("Eastman") and its subsidiaries make no representations or warranties as to the completeness or accuracy thereof. You must make your own determination of its suitability and completeness for your own use, for the protection of the environment, and for the health and safety of your employees and purchasers of your products. Nothing contained herein is to be construed as a recommendation to use any product, process, equipment, or formulation in conflict with any patent, and we make no representations or warranties, express or implied, that the use thereof will not infringe any patent. NO REPRESENTATIONS OR WARRANTIES, EITHER EXPRESS OR IMPLIED, OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR OF ANY OTHER NATURE ARE MADE HEREUNDER WITH RESPECT TO INFORMATION OR THE PRODUCT TO WHICH INFORMATION REFERS AND NOTHING HEREIN WAIVES ANY OF THE SELLER'S CONDITIONS OF SALE.

Safety Data Sheets providing safety precautions that should be observed when handling and storing our products are available online or by request. You should obtain and review available material safety information before handling our products. If any materials mentioned are not our products, appropriate industrial hygiene and other safety precautions recommended by their manufacturers should be observed.

© 2020 Eastman. Eastman brands referenced herein are trademarks of Eastman or one of its subsidiaries or are being used under license. The ® symbol denotes registered trademark status in the U.S.; marks may also be registered internationally. Non-Eastman brands referenced herein are trademarks of their respective owners.